

USER MANUAL

THE INVERTER OF THE FUTURE IS HERE



For any service related issue call 1800-103-5454

Exide Industries Ltd.
59E, Chowringhee Road, Kolkata - 700 020

Dear Valued Customer,

We congratulate you for your excellent choice of our Exide Inverter.

Exide Home Magic Inverter provides dependable backup power during utility power outages, ensuring uninterrupted operation of your essential household appliances. Built with Exide's trusted quality and performance, it delivers reliable power backup and peace of mind whenever you need it.

THE SALIENT FEATURE OF EXIDE HOME MAGIC INVERTER IS

- Square Wave
- Controlled Output Voltage
- **Automatic Battery Charge Management**
- Dual Mode of Charging i.e. High Charging (HI), Low Charging (LOW)
- LED Indications for better user interface
- Protection: Overload, Input/Output Short Circuit, Battery Low, Battery, High, Over Temperature, Mains, Fuse Trip, Reverse Battery Polarity, Reverse Phase
- Wide Mains Voltage Charging Range i.e. 100V-290V
- Mains Low Voltage Charging Facility
- Manual Mains Bypass Facility
- Great Power Saving
- Easy to Service

This manual provides you thorough understanding of your **Exide Home Magic** Inverter and its optimum use. Please read installation and operating instructions in the manual carefully. Before installing your **EXIDE HOME MAGIC INVERTER**, pay special attention to the **CAUTION** and **WARNING** statements in this manual.




ABOUT THE EXIDE HOME MAGIC INVERTER

Exide Home Magic Inverter transforms Direct Current (DC) to Alternating Current (AC). The battery acts as a reservoir ensuring continuous supply when utility power is not available.

CONTROLS

FRONT PANEL


	Graphic Description	Indication	Meaning
1.	MAINS ON	Continuous Glow	Mains Present
		Blinking with beep sound	Thermal Circuit Breaker trip
2.	BACK-UP ON	Continuous Glow	Back-up ON
3.	BATTERY LOW	Continuous glow with beep sound	Battery Voltage Low
		Continuous glow without beep sound	Battery Voltage Low Cut
4.	CHARGING/ CHARGED	Blinking	Battery Charging
		Continuous Glow	Battery Charged
5.	OVERLOAD/ SHORT CIRCUIT	Blinking with beep sound	Overload Alarm
		Blinking without beep sound	Shutdown
		Continuous glow with beep sound	Short Circuit
6.a	ON/OFF - ON	ON/OFF Switch LED Glow	Inverter ON
6.b	ON/OFF - OFF	ON/OFF Switch LED Not Glow	Inverter OFF
7.a	FAST CHARGING	Fast Charging Switch LED Glow	Fast Charging Mode
7.b	NORMAL CHARGING	Normal Charging Switch LED Not Glow	Normal Charging Mode
8.	UPS MODE	UPS Mode Switch ON LED Glow	UPS Mode Operation

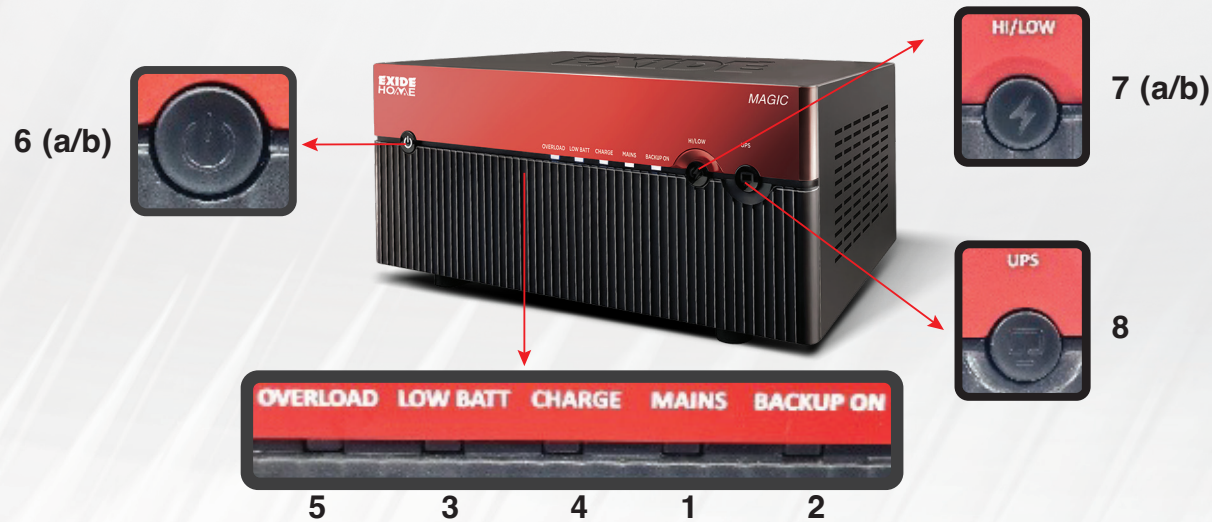

REAR PANEL

Exide Home Magic Inverter has two battery wires coming out from the rear side, a Thermal Circuit Breaker 7Amp for 800VA, 875VA & 1125VA and 10Amp for 1625VA, 2000VA output socket and a three pin top power card to connect with mains supply. Red coloured battery wire is to be connected to positive terminal of battery and black coloured wire to be connected to negative terminal of the battery. Manual/Bypass switch, If Home faulty, then select Bypass selection.

Caution: Do not reverse the battery connections, it will blow the DC fuse connected in series with battery connection inside the Power Card

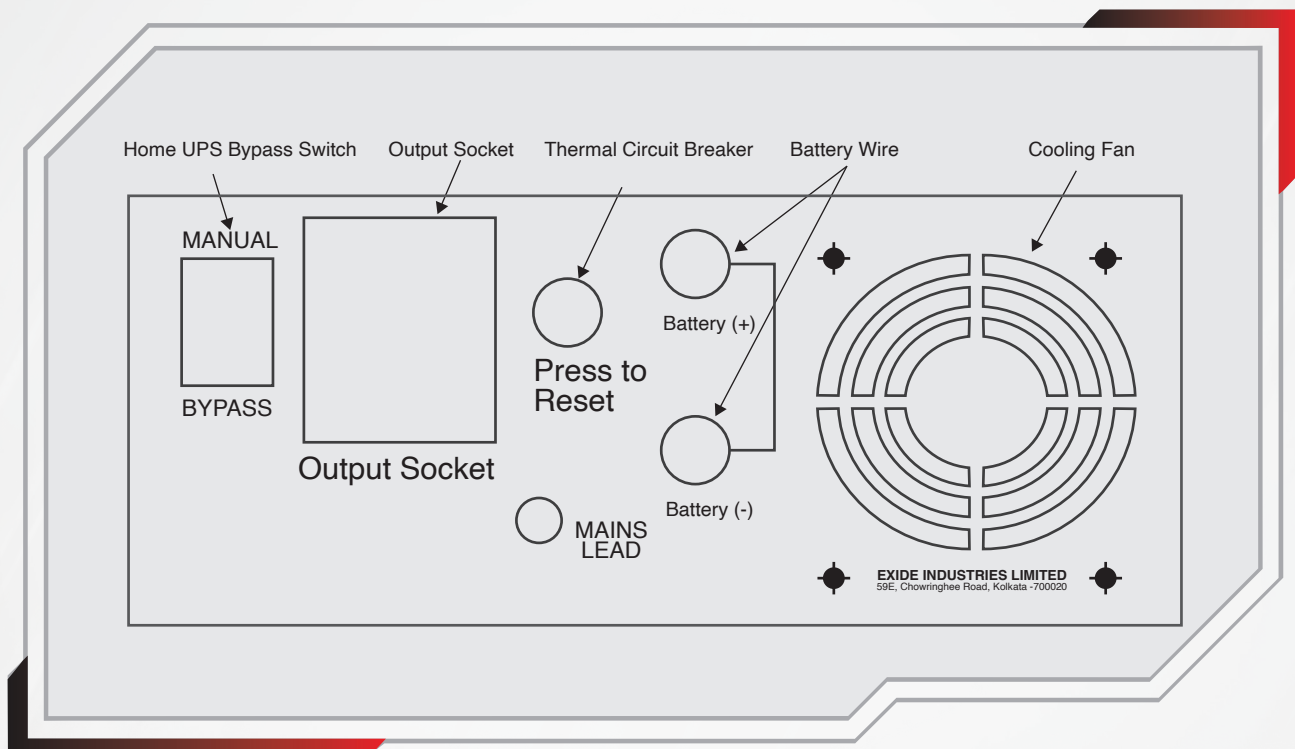

SOME SAFETY MEASURES

Important Precautions

The output side of the AC wiring of Exide Inverter should never be connected to utility power or a DG set. This condition is far worse than a short circuit. If the unit survives this condition, it will shut down until connections are made. Installation should ensure that the AC output of Exide Inverter should not be connected to AC input.

Note: Connecting the battery cables to the Exide Inverter battery terminals may cause spark, usually accompanied by a "snap". This is normal, don't let it scare you. Never disconnect battery cables while the Exide Inverter is delivering power or battery charger is operating. Always turn the switch off first.

General Precautions

Before installing, connecting any wiring or using the Exide Inverter, read all instructions of this instruction manual.

- **CAUTION:** Do not install or connect batteries to this unit unless instructed to do so. Failure to comply with this instruction can cause damage or complete failure of the unit.
- **CAUTION:** To reduce risk of injury, use only deep-cycle lead acid batteries. Do not expose the system to rain, snow or liquids of any type. Do not disassemble the system; call EXIDE authorised service centre when service or repair is required. In correct reassembly may result in a risk of electric shock or fire.
- To reduce risk of electric shock, disconnect all the wiring from the system before attempting any maintenance cleaning. Turning off the system will not reduce this risk
- **WARNING: WORKING IN VICINITY OF A LEAD ACID BATTERY IS DANGEROUS.**
- Be extra cautious when working with metal tools on, or around batteries. The potential exists to drop a tool and short-circuit the batteries or other electrical parts resulting in sparks that could cause an explosion
- Do not leave batteries in discharge state for more than a day or two. They will undergo a chemical process called sulfation which can permanently damage the battery. Also batteries will self-discharge over a period of 3-6 months, so they should periodically recharge even if they are not being used
- **GROUNDING INSTRUCTIONS:** The Exide Inverter should be connected to a grounded, permanent wiring system.

PERSONAL PRECAUTIONS

- Someone should be in your audible range to come to your aid when you work near batteries.
- In case battery acid comes into contact with the skin, clothing, or eyes, immediately flush the affected area with plenty of clean water.
- Always wear appropriate eye protection and protective clothing when handling batteries. Avoid touching your eyes while working with batteries and wash your hands thoroughly after handling.
- If battery acid comes into contact with the skin or clothing, wash immediately with soap and water. If acid enters the eyes, flush immediately with clean running water for at least **15 minutes** and seek immediate medical attention.
- **Do not attempt to charge a frozen battery.**
Before touching the battery terminals, ensure that the inverter is switched OFF and the AC mains supply to the Exide Inverter is disconnected.
- **Do not smoke or allow sparks, open flames, or other sources of ignition near the battery.**
- Remove all personal metal items such as rings, bracelets, necklaces, and watches before working on the battery or electrical circuits. These items may cause a short circuit, resulting in severe burns or injury.
- If it is necessary to disconnect the battery, always disconnect the **grounded (negative) terminal first**. Ensure all connected electrical loads and accessories are switched OFF to prevent arcing. Always work in a well-ventilated area.
- Keep the battery terminals clean. Exercise caution to prevent corrosion or battery residue from coming into contact with the eyes or skin.
- Follow all battery manufacturer instructions, including recommended charging procedures, safety precautions, and charging rates.
- Refill battery cells only with **distilled water**, and only up to the level specified by the battery manufacturer. Do not overfill. For batteries without removable caps, follow the manufacturer's maintenance and charging instructions.
- **CAUTION:** The Exide Home Inverter must be connected to a properly grounded permanent wiring system in accordance with applicable electrical codes and regulations.

SPECIAL NOTICES

1. The Exide Inverter charge is for use with a nominal supply voltage of 12V/ 24V DC.
2. No AC or DC disconnects are provided as an integral part of this system.
3. No over current protection for the battery supply is provided as an integral part of this system. Both AC & DC disconnects must be provided as part of the system installation.
4. No over current protection for the AC output wiring is provided as an integral part of the system. Over current protection of the AC output wiring is provided as part of the system installation.

CHARGING MODE

Model With Rating							
Parameter	MAGIC 700VA 12V	MAGIC 800VA 12V	MAGIC 875VA 12V	MAGIC 1125VA 12V	MAGIC 1625VA 12V	MAGIC 1625VA 24V	MAGIC 2000VA 24V
Fast Charging Current ($\pm 1.5A$)	13	13	14	17	27	20	17
Normal Charging Current ($\pm 1.5A$)	9.5	9.5	10	12	19	14	12.5
Battery Boost Voltage	14.4V $\pm$ 0.2V					28.8V $\pm$ 0.4V	
Battery Float Voltage	13.7V $\pm$ 0.2V					27.4V $\pm$ 0.4V	

LOAD CHART *

MODEL	MAGIC 700 12V				MAGIC 800 12V				MAGIC 875 12V				MAGIC 1125 12V				MAGIC 1625 VA 12V				MAGIC 1625 VA 24V				MAGIC 2000 VA 24V			
Options	A	B	C	D	A	B	C	D	A	B	C	D	A	B	C	D	A	B	C	D	A	B	C	D	A	B	C	D
Computer	0	0	0	1	0	0	0	1	0	0	0	1	0	0	0	2	0	0	0	3	0	0	0	3	0	0	0	3
Printer (Laser)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	1	0	0	0	1	
TV (LCV/LED 32")	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	0	0	0	1	0	0	0	1	0
Fan (80W)	3	0	4	3	5	0	4	3	5	0	4	4	6	0	5	4	8	0	8	4	6	0	8	4	0	8	8	6
LED Bulb (12W)	7	35	7	7	12	42	12	12	15	45	15	10	25	60	26	20	45	25	40	5	45	90	40	5	110	55	50	13
Canshield Light (TW)	10	15	10	7	10	16	10	10	12	14	10	8	12	20	8	8	8	10	6	6	10	25	8	0	10	10	10	

- Depending on the actual VA rating/technical specifications of the appliance. Specifications are subject to change without prior notice due to constant R&D effort. Accessories show in the picture is not the standard part of the product.

APPLICATION CHART EXIDE INVERTER*

Back-up Power of electrical loads:

- Computer & Printer
- Fan, Tubelight CFL, LED Light
- T.V. Sets, DVD & Music System

*Ideal for Computer & Printer.

INSTALLATION

WHERE TO INSTALL

The system should be installed in a location that meets the following requirements



a) **Dry** - Do not allow water to drip or splash on the Exide Inverter



b) **Cool** - The ambient air temperature around the system should be between 0°C to 45°C (32°F to 113°F). Cooler environment is better for the system.



c) **Ventilation**: Allow at least two inches (5cm) of clearance around the system for air flow.



d) **Safe**: Do not install the Exide Inverter in the same compartment as batteries or in any compartment which are storing flammable liquids such as gasoline.



e) **Close to battery** - Install the system as close to the battery as possible in order to minimise the length of cable required to connect the system to the battery. It is better and cheaper to run longer AC



CAUTIONS!

To prevent fire, do not cover or obstruct ventilation openings. Do not install the system in a zero - clearance compartment. Overheating may result.



WARNING!

This equipment contains components which tend to produce arcs or sparks. To prevent fire or explosion do not install in compartment containing batteries or flammable materials or in locations which require ignition protected equipment.


HOW TO INSTALL

DC Cabling:

1. Ensure that the ON/OFF switch on the front panel of the Inverter is OFF before you begin the installation.
2. Connect the negative terminal of the battery to the thick black wire of system
3. Connect the positive terminal of the battery to the thick red wire of system

AC Cabling:

Plug in the power cord to the mains socket on the wall. The cabling should have proper earthing. Connect AC input supply to the 3 way terminal of the system such that the line is connected to 'L', neutral is connected to 'N' and earth is connected to 'E'. Input supply should remain ON once the system is installed. Take out from output socket.

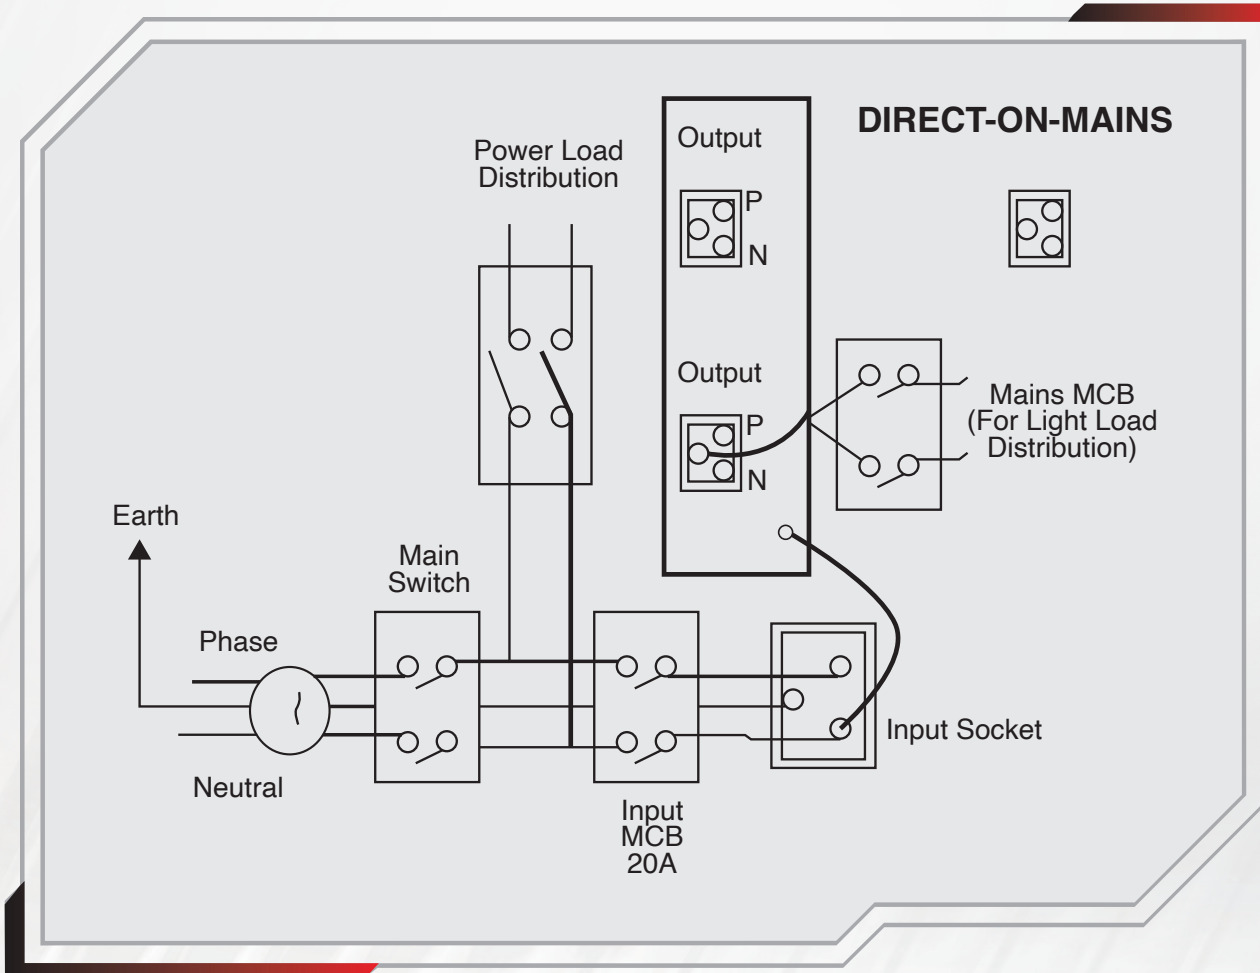

START OPERATION

Once the AC and DC wiring have been installed and connected, take a moment to go re-examine all the connections and make sure they are secured and in the proper terminals.

1. Check to see that the Exide Inverter is turned off and then apply battery (DC) power to it. Ensure that all wiring has been installed properly. Next turn On the battery bank DC disconnects or connect the proper fuse in line to the battery to complete the battery circuit.
2. Put ON/OFF switch to the ON position. This system should run a load without AC input (battery only). Place a load on the system and make sure it works.
3. To charge your batteries connect AC power to the system by lugging in the AC power and turning on the mains line. This shows that charger is working properly. Any AC load powered by the system should also work at this point since a portion of the AC power is passed through this Exide Inverter to power the loads.
4. Disconnect the AC power the system should transfer to battery mode immediately. This will be indicated by clicking sound as the internal transfer relay changes position.
5. The system will begin to take power from the batteries and use it to power the load. And the load continues to operate uninterrupted. The above steps will complete the functional test of the Exide Inverter. If all areas pass, the system is ready for use. If something fail, figure out the reason before proceeding or contact the service centre.

Note: Manual / Bypass switch selection should be manual mode, if Inverter faulty, than select Bypass selection.

MAINTENANCE



Very little maintenance is required to keep your **Exide Home Magic** Inverter operating properly. You should clean the exterior of the unit periodically with a damp cloth to prevent accumulation of dust and dirt

TROUBLESHOOTING GUIDE

Problems and Symptoms	Possible Cause	Solution
No Output Voltage No Indication	Poor battery condition or battery connection loose	Use new battery or make proper connections
No Output Voltage Overload Indication	Excess Load Applied	Reduce the excessive load from the Exide Inverter & reset by ON/OFF Switch
No Output Voltage LCD shows all trip	Thermal shut down	Call the service support. There is overheat problem in the system
Buzzer Continuous Beep	Circuit Breaker Trip	Reset Circuit Breaker on the rear side of the inverter
Mains ON but Not Charging	UPS / Normal Selection switch may be in UPS mode	Check Mains voltage at LCD Display & Selection of Normal/UPS mode as per specified voltage range

SPECIFICATIONS

Technical Specifications

PARAMETER	SPECIFICATION						
	MAGIC 700	MAGIC 800	MAGIC 875	MAGIC 1125	MAGIC 1625 VA 12V	MAGIC 1625 VA 24V	MAGIC 2000 VA 24 V
No Load Output Voltage	235±10V	235±10 V	235±10 V	235±10V	235±10V	235±10V	235±10V
Output Frequency	50 Hz±0.5	50 Hz±0.5	50 Hz±0.5	50 Hz±0.5	50 Hz±0.5	50 Hz±0.5	50Hz±0.5
Output Wave Form	Square Wave						
Normal Battery Voltage	12V					24V	
Battery Low Cut Range	10.5±0.2V					21.0±0.4	
Mains Input Range (at Normal Mode)	180 - 290 V ±10						
Mains Input Range (at UPS Mode)	180 - 265 V ±10						
Mains to Back Up (UPS Mode)	≤ 10 msec						
Mains to Back Up (Normal Mode)	≤20 msec						
Change Over Time - Mains to Back Up (UPS Mode)	≤ 10 msec						
Change Over Time - Back Up to Mains (Normal Mode)	≤10 msec						